

SURFACE AND FLUSH MOUNT ROCKER SWITCHES



In or Out... we make it Easy!®

Instructions

909S (Surface Mount)

1. Remove decorative bezel around switch.
2. Mount switchbase in desired location.
3. Connect wires under appropriate terminals (Fig. 1).
4. Replace decorative bezel.

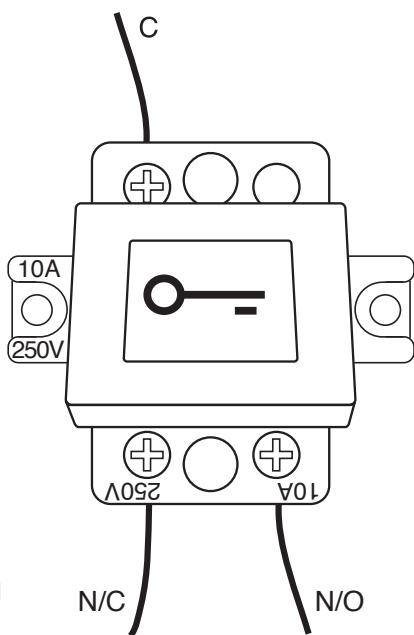


Fig. 1

909F (Flush Mount)

1. Remove decorative cover of switch (key symbol) using a slot screwdriver to carefully pry it off.
2. Cut a 2-1/4" x 1-1/4" hole in the drywall.
3. Connect wires under appropriate terminals (Fig. 2).
4. Insert switch into hole. Tighten the two metal slot screws, until switch is secure.
5. Replace switch cover.

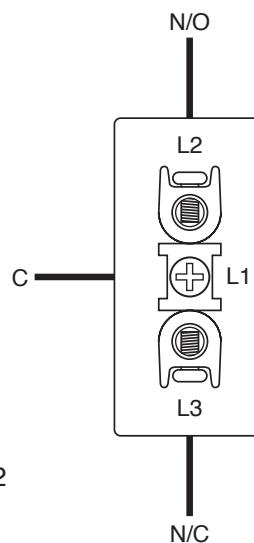


Fig. 2

Description	Switch Mode	Switch Configuration	Switch Rating	Standard Finish
909-MO Rocker Switch	Momentary Action	SPDT N/O or N/C	10A @250V	Beige (plastic)
909-MA Rocker Switch	Maintained Action*	SPDT N/O or N/C	10A @250V	Beige (plastic)

NOTE: Specifications are subject to change without notice. N/C – Normally Closed; N/O – Normally Open

*Maintained not available for Flush Mount.